Medusa



Multi-Feeding Systems

Medusa Pole Pots are unique in their design which allows the angler to feed and fish at the same time with pin point accuracy and to stop feeding immediately with the twist of the hand.

POLE POT: To use as a pole pot leave perforated holes intact and remove lid for balls of groundbait, pellet, meat, chopped worm, maggots etc.

DRIP FEEDING: Using the blunt end of a disgorger push the 5.5 mm perforated holes out of the pole pot. The bottom four holes suits most swims for maggots.

SLOW DRIP FEEDING: From the INSIDE of the pole pot plug 1 or 2 holes or add hemp, casters, micro pellet, with maggots to slow the feed rate. To revert back to a pole pot plug all the holes or tape up accordingly

STOP DRIP FEEDING: Simply turn the pole pot upside down, for example when shipping out and playing a fish.

FITTING 1: Slacken P.T.F.E. Bush on pole end and stretch the elastic then slide the pole through the bottom of the pot until finger tight (slight twist to secure)

REMOVING POT: When removing pot, gently twist and slide at the same time towards the pole tip until released.

FITTING 2: Select a tapered adaptor for the pole, wrap it around pole tip making sure it is FULLY closed and secure with any Medusa pole pot then slide pot and adaptor down pole until finger tight (slight twist to secure) adaptors fit power and mega tops.

REMOVING POT: Gently slide pot towards pole tip until released and the adaptor will simply open and fall off the pole.

